



- K1,K2 CONTACTORS
- K01 RELAY
- M1 MOTOR
- Q1 MOTOR-PROTECTION CIRCUIT-BREAKER
- S1 OPERATION SWITCH \*LEFT-RIGHT\*
- S2 PUSH BUTTON \*UNCOUPLE\*
- V1 RECTIFIER (SUPPRESSOR)
- W1 SLIP-RINGS
- X1 TERMINALS
- X2,X3 PLUG CONNECTORS
- Y1 MAGNETIC VALVE