

## INSTRUCTIONS FOR WATER SUPPLY AND ELECTRICITY FROM THE AUTOMATIC DEVICES (PILLARS)

- i) You must pay the value for water and electricity that you will consume to the offices of Volos Port Authority S.A. and then we will provide to you the magnetic key that gives access to the automatic devices (pillars).



- ii) For taking water or electricity or both of them at the same time you must insert the magnetic key in the slot of the Pillar then choose and press **one** of the free red buttons which are for sockets (electricity) or/ and **one** of the free blue buttons which are for valves (water). You must connect the socket / valve and take out from the slot of the pillar the magnetic key. Then you must **turn ON** the switch for electricity or water and your boat can now be powered by the selected facilities.



- iii) When you want to finish power or water supply you **turn OFF** the switches of electricity / water, disconnect the socket / valve , insert the magnetic key in the



slot of the Pillar and press the button of the socket / valve which provide your boat with electricity / water. Then you take out the magnetic key from the slot of the Pillar. **If you don't do the termination the**



**selected facilities can be used from other users charging your account.**

☎ Port Authority S.A. / Electricians

24210 – 32233

☎ Port Authority S.A. / Accounting Department

24210 – 27561